



A GUIDE TO USING ADHESIVE MATTING

1

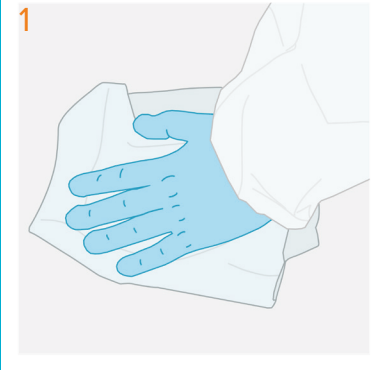


Before placing the mat down you must wipe the area, leaving enough time for the surface to dry

2

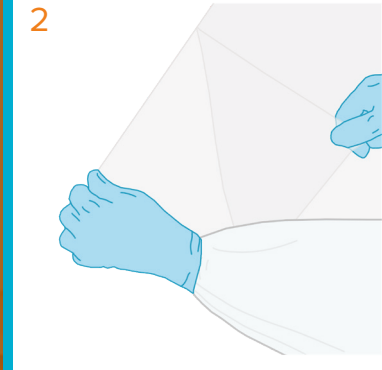


Remove a set of mats from the box and peel off the bottom adhesive layer (always make sure boxes are stored flat)

3

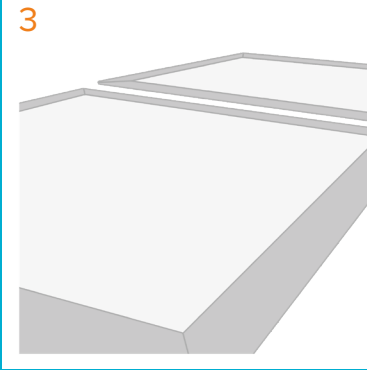

Ensure mats are placed with enough space for users to take three steps before entering the gowning area

4

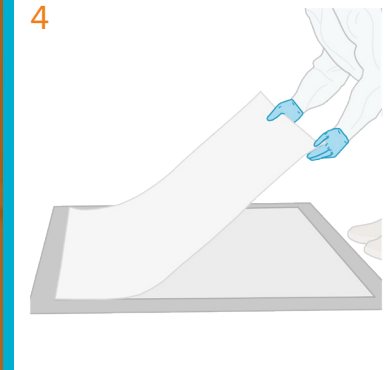


Flip the mat over, gradually sticking the adhesive mat to the prepared surface

5



Ensure all air bubbles are removed by applying weight to the mat, securing it to the floor

6

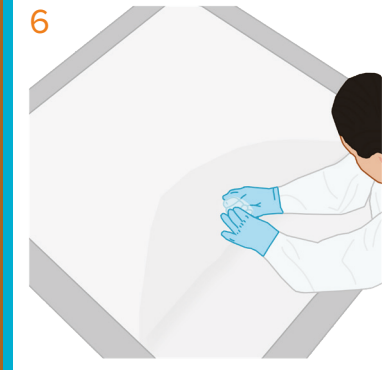


Once on the ground, pull off the first adhesive layer. Peel the layer back into a ball to reduce static charge

7



Now you can use the mat. Make sure to take a minimum of three steps to ensure full contamination control

8

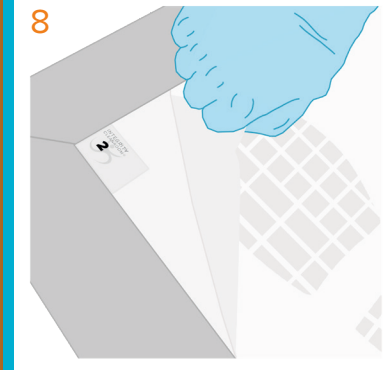

When dirty, remove the top adhesive layer. Each layer is numbered to indicate remaining number of adhesive layers